#### Honsberg Instruments GmbH Tenter Weg 2-8 • 42897 Remscheid • Germany Fon +49 (0) 2191 - 9672 - 0 • Fax - 40 www.honsberg.com • info@honsberg.com



VHS

## Product Information

# Flow Transmitter / Screw **Volumeter VHS**



- Measures and monitors viscous media (oil) 1.4..2500 l/min .
- Connection G 1.. G 2<sup>1</sup>/<sub>2</sub>
- Very low dependence on viscosity .
- Can be used up to 40,000 mm<sup>2</sup>/s (cSt)
- Linear frequency output (push-pull)
- Light and compact device (aluminium housing)
- Operation and measurement possible with forwards and reverse flow
- For cost-sensitive applications

## **Characteristics**

The VHS flow transmitter measures the flow using the volumetric principle, and is suitable for fluid, viscous, lubricant media (e.g. lubricating oil). If the material for the VHS is selected appropriately, aqueous fluids such as soaps, pastes, and emulsions with nonabrasive characteristics can also be measured, as long as they have sufficient lubricity. Because of the volumetric functioning principle, the device is almost completely independent of viscosity. The VHS system consists of two interlacing screws which run in opposite directions, driven by the flowing medium. A magnetically pre-tensioned Hall sensor positioned outside the flow space detects the screw flanks, and creates a frequency signal proportional to the flow. Here, two pulses correspond to one revolution of the screws, and therefore to a specific measured volume (see data table) There are no magnets in the flow space. A push-pull transistor output, an A / B output or a two wire output are available as signal output. The push-pull output can as desired be switched as a PNP or an NPN output, and emits a frequency proportional to the flow rate.

The A / B output consists of two push-pull outputs, whose signals are phase-shifted by 90  $^\circ.$  This makes it possible to determine the direction of flow using the bidirectionally driven sensor.

The 2 wire model represents the pulse as two different currents, and has the advantage of reduced wiring effort. Alternatively, it is possible to use add-on electronics with signal processing, in the series OMNI, FLEX and LABO.

The device bodies are made of aluminium, and the connections either of aluminium (achieves PN 160 bar) or steel (achieves PN 350 bar). Optionally, both process connections can be fitted with SAE flanges, which simplify the installation in the pipework, and in both cases achieve a pressure resistance of PN 350.

# **Technical data**

recifical data							
Sensor	screw volumeter						
Nominal width	DN 2565						
Process connection	ess connection female thread G 1G 2 <sup>1</sup> / <sub>2</sub>						
Metering ranges	see table "Ranges"						
Measurement accuracy	±1 % of the measured value (at 20 mm²/s, (cSt) of 1 %100 % nominal working range (see also diagram in upstream pages)						
Repeatability	±0,25 %						
Pressure resistance	Connection material	SAE flange	PN bar				
	aluminium	without	160				
	aluminium	with	350				
	steel	without	350				
	steel	with	350				
	others available on	request					
Pressure loss	see diagrams in						
	upstream pages						
Medium oil or non-aggressive self-lubricating fluids							
Medium temperature	-25+80 °C (150 °C						
	available on reques	,					
Materials medium-	(special materials a	vailable on					
contact	request):						
			**************************************				
1. Body	Aluminium 6082 an						
2. Connections:							
3. Main screw	Steel 35SMnPb10 UNI 4838-80						
4. Subsidiary screw	GHISA GJL-250 EN	1561					
5. Ball bearing	Steel						
6. Ball bearing	Steel						
7. Screws	7. Screws Galvanised steel						

NBR

Steel

Steel

- 8. O-ring
- 9. Seeger ring
- 10. Seeger ring 11. O-ring
- NBR 12. SAE ASTM A216WCB
- connection 13. SAE flange ASTM A216WCB NBR 14. O-ring
- 15. Screws Galvanised steel 16. Sensor Aluminium 6082 anodised
- spacer 10..30 V DC 3 wire Supply voltage or A / B-Curr. approx. 20 mA without load output consumpt. Signal output Transistor output "push-pull"
  - (resistant to short circuits and reversed polarity protected)  $I_{out}$  = 100 mA max.

"MADEIN GERMANY Professional Instrumentation

A subsidiary of





## VHS

2 wire	Supply voltage	4.524 V DC
	Signal output	Low: 7 mA High: 14 mA
	Reversed polarity protected	yes

Electrical connection	plug DIN 43650-A / ISO 4400 or for round plug connector M12x1, 4-pole
Ingress protection	IP 67
Weight	see table "Ranges and weights"
Conformity	CE

## Ranges and weights

## • = Standard O = Option

G	DN		DN		Metering range 1100 % Q <sub>nom</sub>	Volume / pulse	pulses / litre	Output frequency at Q <sub>nom</sub>	Output frequency at Q <sub>max</sub>	Types	<b>Q</b> <sub>max</sub> recommended
			l/min	cm³		Hz	Hz		l/min		
G 1	DN 25	•	1.4 140	13.10	76.340	178.1	254.5	VHS-0250140	200		
G 1 <sup>1</sup> / <sub>4</sub>	DN 32	•	3.5 350	29.00	34.480	201.1	287.4	VHS-0320350	500		
G 1 <sup>1</sup> / <sub>2</sub>	DN 40	0	5.5 550	48.58	20.590	188.7	274.5	VHS-0400550	800		
		•	8.0 800	72.00	13.890	185.2	277.8	VHS-0400800	1200		
G 2	DN 50	0	10.01000	103.63	9.650	160.6	257.3	VHS-0501000	1600		
		•	15.01500	133.00	7.519	188.0	275.7	VHS-0501500	2200		
G 2 <sup>1</sup> / <sub>2</sub>	DN 65	•	25.02500	238.82	4.187	174.5	265.2	VHS-0652500	3800		

G	DNrange		Body with aluminium connections	Body with steel connections	SAE Flanges (Weight per pair)
			kg	kg	kg
G 1	0250140	•	3.44	4.76	5.76
G 1 <sup>1</sup> / <sub>4</sub>	0320350	•	6.35	8.50	9.55
G 1 <sup>1</sup> / <sub>2</sub>	0400550	0	10.50	13.60	15.10
	0400800	•	14.20	18.50	18.80
G 2	0501000	0	20.70	27.70	30.30
	0501500	•	25.00	33.20	34.60
G 2 <sup>1</sup> / <sub>2</sub>	0652500	•	42.70	56.10	60.70


## Wiring

Before the electrical installation, it must be ensured that the supply voltage corresponds with the data sheet.


The use of shielded cabling is recommended.

## Push-pull output

with 4-pole round plug connector

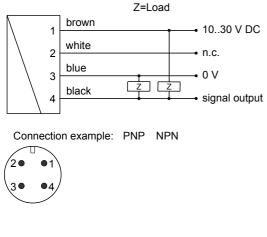


with plug as per DIN 43650-A / ISO 4400

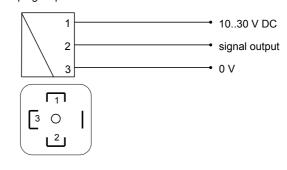

#### A / B output

only with 4-pole round plug connector

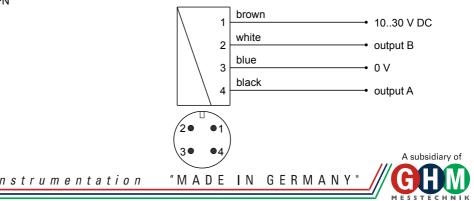

pi-ho-fsp-vhs\_e V1.00-00


#### Honsberg Instruments GmbH Tenter Weg 2-8 • 42897 Remscheid • Germany

Fon +49 (0) 2191 - 9672 - 0 • Fax - 40 www.honsberg.com • info@honsberg.com

# **Product Information**

### 2 wire model

with 4-pole round plug connector

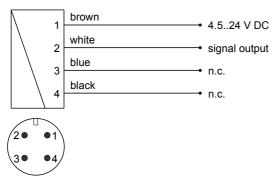

1 • 4.5..24 V DC 2 signal output 3 n.c.  $\Box$ 3 Ο I

VHS

INSTRUMENTS


with plug as per DIN 43650-A / ISO 4400

## **Dimensions**

• = Standard O = Option						VHSGAO			VHSGAX						
G	DNrange		x1	L1	ØD	SW	Α	М	x2	В	С	L2	Н	E	F
G 1	0250140	٠	20	220	88	78	49.0	12	20	57.1	27.8	324	52	80	69
G 1 <sup>1</sup> / <sub>4</sub>	0320350	٠	22	285	103	-	55.0	14	22	66.7	31.6	381	48	94	77
G 1 <sup>1</sup> / <sub>2</sub>	0400550	0	24	332	122	-	58.8	16	24	79.4	36.5	448	58	106	89
	0400800	٠		340	138	-	66.5					456			
G 2	0501000	0	33	396	155	-	71.0	20	35	96.8	44.4	544	74	135	116
	0501500	٠		405	168	-	77.3					553			
G 2 <sup>1</sup> / <sub>2</sub>	0652500	•	35	475	203	-	86.0	24	42	123.8	58.7	633	79	166	150

VHS-..GAO



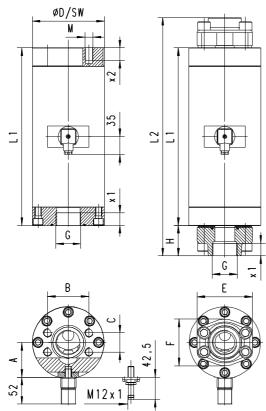

SAE adapter for convenient installation and for increased stability to pressure! (350 bar)

# Handling and operation

## Installation

L<sup>2</sup> I

Any flow direction is possible during installation.

Ensure that pipework is clean. Flush before installation. A filter with

 $30\ \mu\text{m}$  mesh filter should be used. The use of SAE flanges enables the sensor to be installed and removed more easily, and increases the stability to pressure to 350 bar for every connection material.

It is possible to replace the electronics during operation, and this presents no danger to the fitter. The sensor does not go into the flow space.




A subsidiary of

## Honsberg Instruments GmbH

Tenter Weg 2-8 ● 42897 Remscheid ● Germany Fon +49 (0) 2191 - 9672 - 0 ● Fax - 40 www.honsberg.com ● info@honsberg.com

**Product Information** 

## Ordering code



O=Option

1.	Nominal width									
	025 DN 25 - G 1									
	032	DN 32 - G 1 <sup>1</sup> / <sub>4</sub>								
	040	DN 40 - G 1 <sup>1</sup> / <sub>2</sub>								
	050	DN 50 - G 2								
	065	DN 65 - G 2 <sup>1</sup> / <sub>2</sub>								
2.	Process connection									
	G female thread									
3.	Connecti	on material								
	A	AL connection, anodised (160 bar, in combination with								
		SAE flange: 350 bar)								
	s o	Connection, steel (350 bar)								
4.	Addition	al flange								
	Х	SAE flange, steel (350 bar)								
	0	no SAE flange (pressure resistance depends on the connection								
	Ŭ	material)								
5.	Body ma	terial								
	A	anodised aluminium								
6.	Metering	range								
	0140	1.4 140 l/min •								
	0350	3.5 350 I/min •								
	0550 O	5.5 550 l/min •								
	0800	8.0 800 l/min								
	1000 <b>O</b>									
	1500	15.01500 l/min •								
	2500	25.02500 l/min								
7.	Seal mate									
	N	NBR								
-	V O	FKM								
8.	Signal ou	•								
	M	push-pull transistor output								
<u> </u>		A / B output (2 x push-pull)								
		2 wire								
9.										
	B S Q	plug DIN 43650-A / ISO 4400								
10	S O Option	for round plug connector M12x1, 4-pole								
10.	high temperature model only for M12v1									
	н о	Plug, electronics recessed by 30 cm								
L	I									



VHS

## Accessories

• Cable/round plug connector (KB...) see additional information "Accessories"

## **Accessories**

- External counter EEZ-904
- External counter OMNI-C (panel-mounting IP 67)
- External display / converter OMNI-TA (panel-mounting IP 67)
- External display / converter OMNI-REMOTE (panel-mounting IP 67)

